

MODEL: BC-2000 Card Access

Installer Code: *9999#

1) Install Cards (1000 user)

***9999# → Press 1 → (Card Last 3 Digit) # → Flash First Card**

(Second Card) → (Card Last 3 Digit) # → Flash Second Card

(Third Card) → (Card Last 3 Digit) # → Flash Third Card → Follow the same step for fourth and more card. END...(Exit)**

2) Operation Mode

a) ***9999# → 30 #* (Card Only)**

b) ***9999# → 31 #* (Card and PIN)**

c) ***9999# → 32 #* (Card or PIN) ----Default**

3) Add/ Changing User PIN

NOTE:Access without installer Code→

***→Flash User Card →1234# →(4 Digit NEW PIN) # →(repeat 4 Digit NEW PIN) # → “*”**

NOTE: a)PIN number can be any 4 Digit,except”1234”.

b)after program the PIN ,pls MARK the CARD for next times when changing the existing PIN.

: Release Door: Press→ User PIN #

4) Delete Card

a) ***9999# → 2→Card number #**** (delete individual card by using last 3digits of card)

b) ***9999# → 2→Flash Card #**** (delete by using card)- more cards repeat)

c) ***9999# → 2→0000 #**** (delete all data)

5) Door Release Time (default 5sec)

9999# → 4 →XX(00-99) #

6) Changing Installer Code

9999# → 0 → XXXX # XXXX #

(xxxx is NEW Installer Code)

7) Setting Door Open Detection

a) ***9999# → 60 #*** (disable) ---default

b) ***9999# → 61 #*** (enable)

8) Resetting To Factory Default Setting

OFF Power→press the “*” and hold it

→ON Power ,keep hold and hear 2 beep

Sound.

