

## METAL CARD ACCESS

**Installer PIN: #881122**

1) Install Cards

**Installer PIN →5 →XXX →Flash first card # →5 →XXX →Flash second card # →.....END#**

Note: **XXX** is last 3digits number of card

2) Delete Card

a) **Installer PIN →7 →Card last 3 Digit ##**

b) **Installer PIN →7 →Flash card ##**

3) Add/ Changing User PIN

**Installer PIN →3 → 4 Digit pin #**

**Release Door: Press→ 4 Digit PIN**

5) Door Release Time (default 3sec)

**Installer PIN→ 2 →XX # (00-99sec)**

6) Changing Installer Code (Installer PIN is 6 Digit)

**Installer PIN→ 0 → XXXXXX → XXXXXX**

7) Setting Door Open Detection

**Installer PIN→**

a) **8 0 ## (disable) ---default**

b) **8 1 ## (enable)**

8) Resetting To Factory Default Setting

**Short the "J2 RST" jumper will listen "bi...bi...bi... 3 sound**

