

## MODEL: W2 Waterproof Card Access

### 1) Add Card With Manager Card

**Flash Add Manager Card** → Flash New Card(Follow the same step for fourth and more card) → Flash Manager Card(Exit)

### 2) Delete Card With Manager Card

**Flash Delete Manager Card** → Flash Card (Follow the same step for fourth and more card) → Flash Manager Card(Exit)

---

### 4) Add Card With Remote Keypad

**\*888888#** → Flash New Card(Follow the same step for fourth and more card) → # (Exit)

### 5) Delete Card With Remote Card

**\*888888#** → 2 → Flash Card #\* (delete by using card)- more cards repeat)

**\*888888#** → 2 → Card number #\* (delete individual card by using last 8 Digits of card)

**\*888888#** → 2 → 0000 → # (Delete All Data)

### 6) Lock Release Time

**\*888888#** → 5 → XX(00-99 sec)

### 7) Add Manager Card

**Off Power** → short the “Jumper Hole”(Behind The Reader) → **On Power Will Lesen 2 Beep Sound** → **Flash “Add Manager Card” first** → **Second Flash “Delete Manager Card”** → **LED will Change to RED Colour.**

### 8) Resetting To Factory Default Setting

**Off Power** → short the “Jumper Hole”(Behind The Reader) → **On Power wait 5 SEC Until LED change To RED Colour.**

