

## MODEL: W3-C Card Access

**Installer Code: \*888888#**

### 1) Install Cards (1000 user)

**\*888888# → Press 1 → Card Last 3 Digit # → Flash First Card**

**(Second Card) → Card Last 3 Digit # → Flash Second Card**

**(Third Card) → Card Last 3 Digit# → Flash Third Card → Follow the same step for fourth and more card. END.....\*(Exit)**

**NOTE: XXX is CARD LAST 3 Digit.**

### 2) Operation Mode

a) **\*888888# → 30 #\* (Card Only)**

b) **\*888888# → 31 #\* (Card and PIN )**

c) **\*888888# → 32 #\* (Card or PIN) ----Default**

### 3) Add/ Changing User PIN (10 PIN)

**\*888888# → Press 1 # → 0001 → 4 Digit New PIN → #**

**(Second PIN) → 0002 → 4 Digit New Second PIN → # → Follow the same step for fourth and more PIN . END.....\*(Exit)**

**: Release Door: Press → User PIN #**

### 4) Delete Card

a) **\*888888# → 2 → Card number #\* (delete individual card by using last 3digits of card)**

b) **\*888888# → 2 → Flash Card #\* (delete by using card)- more cards repeat)**

c) **\*888888# → 2 → 0000 #\* (delete all data)**

### 5) Door Release Time (default 5sec)

**\*888888# → 4 → XX(00-99) #\***

### 6) Changing Installer Code

**\*888888# → 0 → XXXXXX # XXXXXX #\***

**(xxxx is NEW Installer Code)**

### 7) Setting Door Open Detection

a) **\*888888# → 60 #\* (disable) ---default**

b) **\*888888# → 61 #\* (enable)**

### 8) Resetting To Factory Default Setting

**OFF Power → press the “\*” and hold it  
→ ON Power, keep hold and hear 2 Beeps  
sound**

**then release the button and wait until the LED  
change to RED Colour.**

