

## METAL PIN ACCESS 2012

**Installer PIN: #12345#**

1) Add User PIN

**#12345# → 2 → 6 Digit pin #**

**Release Door: Press → 6 Digit PIN#**

2) Delete USER PIN

a) **#12345# → 3 → 6 Digit User Pin**

b) **#12345# → 50# → Delete All Data**

4) Door Release Time (default 5sec)

**#12345# → 0 → XX # (00-99sec)**

5) Changing Installer Code (Installer PIN is 5 Digit)

**#12345# → 1 → XXXXX# → #(Exit)**

6) Reset Installer PIN

**OFF Power → Press the "PUSH BUTTON" and HOLD → ON Power → After 5 second release the button.**

