

MODEL: BC-300

Installer Code: #12345

1) **Add Cards (250 User)**

Installer PIN→#12345

Press '2'→XXXX→Flash card→Press '2'→XXXX→Flash Second Card→Press'2'→XXXX→Flash Third card→.....*

Note: XXXX Must use the card last '4' digits number

2) **Add PIN (8 User)**

Installer PIN→#12345

Press'2'→Press 1111→XXXXXX '6' Digit New Password→Press'2'Second PIN 2222→XXXXXX '6' Digit→ '*' Exit

Release Door: Press→ User PIN

3) **Changing PIN**

Installer PIN→#12345

Press'8'→Press Old '6' Digit Password→Press NEW '6' Digit Password

4) **Add PIN & Card**

Installer PIN→#12345

Press'0'→Press Card Last'4'Digit→Touch The Card→Key in '6' Digit Password→'*' Exit

Release Door: Touch Card & Press 6 Digit to Open Door

5) **Delete Card & Pin**

Installer PIN→#12345

a) Press 3→Card number OR Pin number (delete individual card by using last 4 digits number of card)

b) Press 3→Flash Card(delete by using card)- more cards repeat

c) Press '4' is delete all user

6) **Lock Release Time** (default 5 sec)

Installer PIN→'5' →XX *(00-99 sec)

7) **Changing Installer Code**

Installer PIN→ 1 →XXXXXX '5' Digit

8) **Resetting To Factory Default Installer Code**

OFF Power → Press 'k2' Button→ON Power→

Hold 3-5 Sec(LED Light All Bliking) →Release k2.

