

METAL CARD ACCESS 2012

Installer PIN: #12345#

1) Install Cards

#12345#→2 →XXXX# →Flash First Card

“Second Card” →XXXX# →Flash Second Card

“Third Card” →XXXX# →Flash Third Card →”*”(For Exit) Follow the same step for fourth and more card.END

Note: **XXXX** is last 4digits number of car

2) Add User PIN

#12345# →2 → 6 Digit pin #

Release Door: Press→ 6 Digit PIN#

3) Delete CARD & USER PIN

a) **#12345#→3 → Card last 5 digit** (delete individual card by using last 5digits of card)

b) **#12345#→3 → Flash Card** (delete by using card)- more cards repeat)

c) **#12345#→3 → 6 Digit User Pin**

d) **#12345#→50#→ Delete All Data**

4) Door Release Time (default 5sec)

#12345#→ 0 →XX # (00-99sec)

5) Changing Installer Code (Installer PIN is 5 Digit)

#12345#→ 1 → XXXXX# → #(Exit)

6) Reset Installer PIN

OFF Power → Press the “PUSH BUTTON” and HOLD → ON Power → After 5 second release the button.

