

Digital Frontier


DFA5300V2

16 zones Voice Alarm System

Installer Manual

V2 rev 0

Programming Flow Chart Diagram

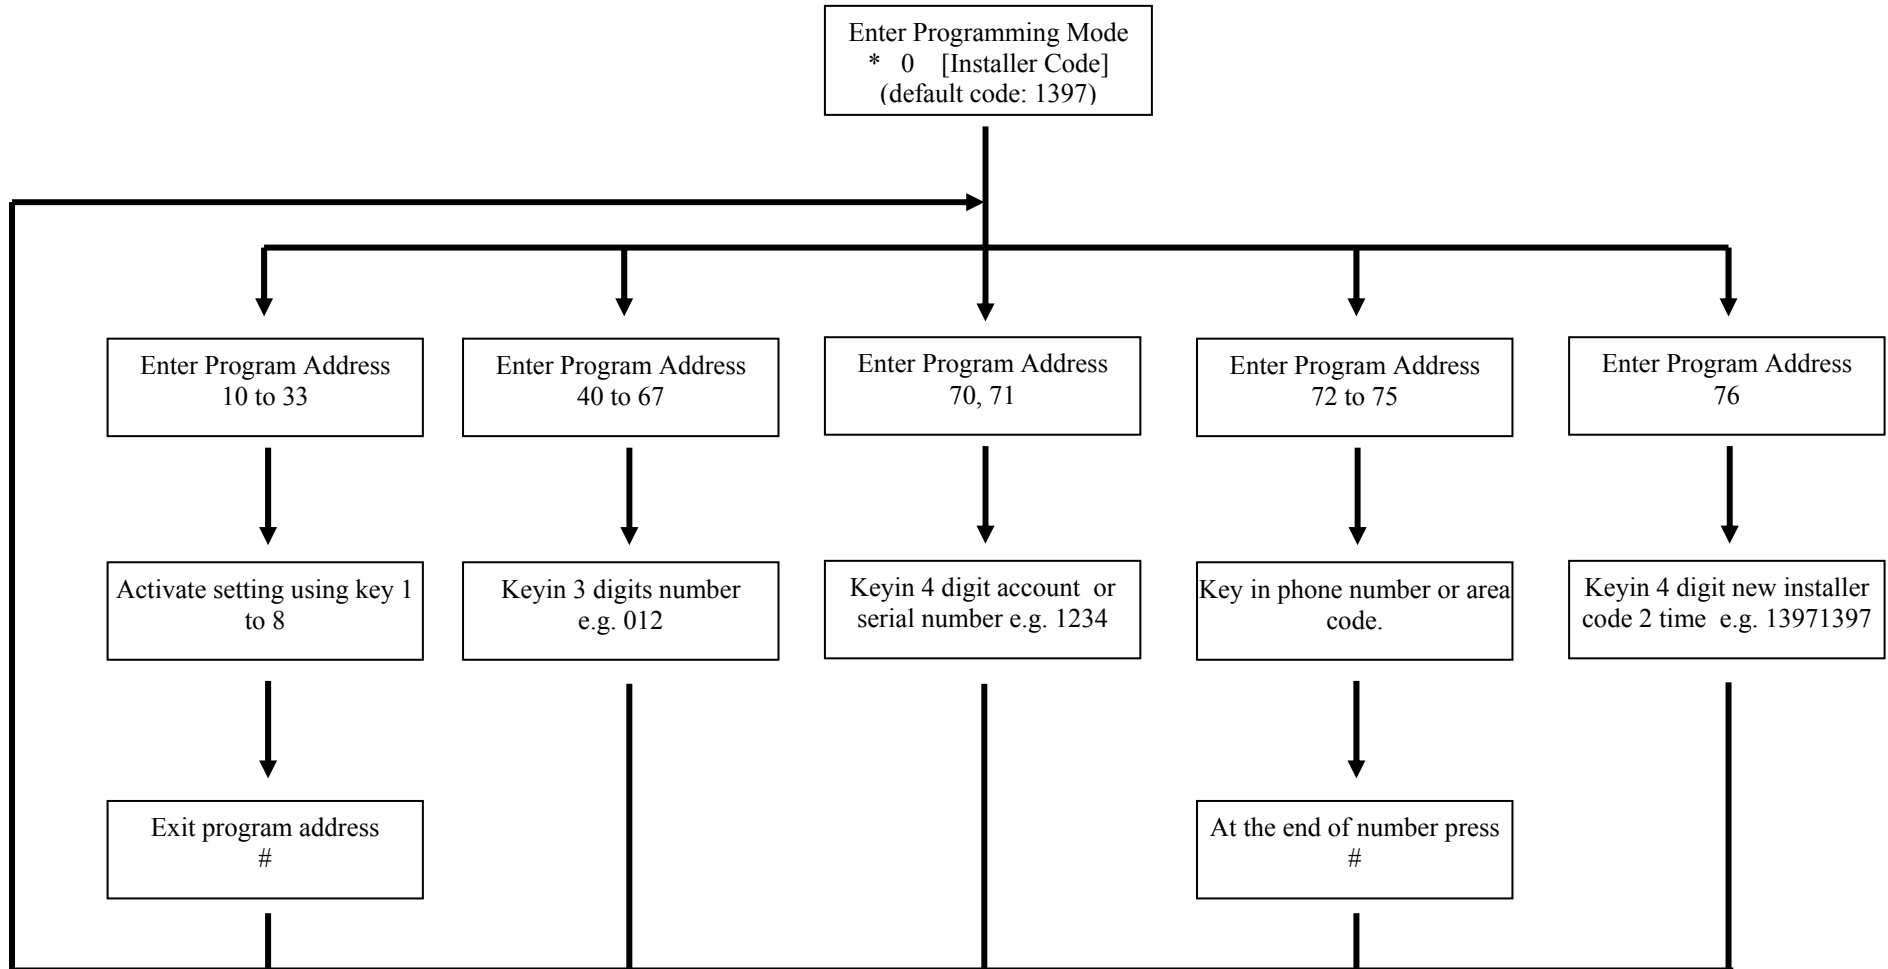


32	Communicator Setting 2. Zone Led 1 on mean: Enable AC loss personal reporting. Zone Led 2 on mean: Enable Battery low personal reporting. Zone Led 3 on mean: Double ring answering Zone Led 4 on mean: Enable double CMS reporting. (only available in GSM version)	Zone Led 5 on mean: Enable SMS reporting. 16 SMS report. Zone Led 6 on mean: Enable 20 SMS reporting. Zone Led 7 on mean: Enable 30 SMS reporting.	●○○○ ○○○○
33	System Option. Zone Led 1 on mean: Keypad buzzer on during entry delay. Zone Led 2 on mean: Keypad buzzer on during exit delay. Zone Led 3 on mean: Short beeping during delay. Zone Led 4 on mean: DTMF dialing, else pulse dialing.	Zone Led 5 on mean: Enable one key arming using H or A. Zone Led 6 on mean: Enable keypad panic button P. Zone Led 7 on mean: Enable RF remote control arming. Zone Led 8 on mean: Enable RF remote control querk.	●●●● ●●○○

Number programming.		
Add.	Description	Default Value
40	Entry timer partition1. From 0 to 255 sec.	040
41	Entry timer partition2. From 0 to 255 sec.	040
42	Exit timer partition1. From 0 to 255 sec.	120
43	Exit timer partition2. From 0 to 255 sec.	120
44	Bell timer for auto reset zone. 0 to 255 minute.	005
45	Fast respond timer. [0 to 255] * 1.6 ms.	008
46	Slow respond timer. [0 to 255] * 1.6 ms	015
47	Intelligent zone counter 1. 0 to 255 times. If counter exceed, intelligent zone group 1 trigger.	002
48	Intelligent zone counter 2. 0 to 255 times. If counter exceed, intelligent zone group 2 trigger.	003
49	Intelligent zone reset timer 1. 0 to 255 minutes. Intelligent zone group 1 counter reset timer.	010
50	Intelligent zone reset timer 2. 0 to 255 minutes. Intelligent zone group 2 counter reset timer.	030
51	PGM1 (See PGM programming sheets)	008
52	PGM2 (See PGM programming sheets)	009
53	PGM3 (See PGM programming sheets)	000
54	PGM4 (See PGM programming sheets)	000
55	Keypad lock digit. 0 to 255 times of password error before keypad lock. (Prevent password guessing on keypad).	012
56	Keypad lock time. 0 to 255 seconds keypad lock time.	060
57	Communicator Dialing time. 0 to 255 second. Specified the time to wait for the user answer during personal reporting.	040
58	Communicator Idle time. 0 to 255 sec. Specified the time to wait for a key press before auto hang-up during personal reporting.	040
59	Communicator Dial loop. Number of time to dial on each telephone number. (for both personal and CMS reporting).	010
60	Answer ring. Number ring to wait before answer call. 0 to 255 ring. (Feature available with voice card module only)	008
61	Communicator Password Error auto-hang-up. Number of error password digit is allowed to key in before communicator auto hang-up. (Prevent password guessing through phone).	012
62	CMS Periodic Report. 001 to 255 hour. (000 mean disable).	024
63	Reserved.	000
64	Reserved.	000
65	Reserved.	255
66	Reserved.	000


Other programming.		
70	CMS Account number 1. 4 digits Contact ID user code.	0000
71	CMS Account number 2. 4 digits Contact ID user code.	0000
72	CMS Phone number 1. Maximum 15 digits. P for pause 2 seconds. Ended phone number with #.	Nil
73	CMS Phone number 2. Maximum 15 digits. P for pause 2 seconds. Ended phone number with #.	Nil
74	Area Code or Prefix. Maximum 5 digits. P for pause 2 seconds. Ended phone number with #.	Nil
75	Reserved.	000
76	Change Installer code. The 4 digit installer code must be key in 2 times. If both installer codes are different, it will not be save.	1397
90	Firmware version. Display Firmware version.	
97	Reset SIM card SMS. Reset SIM card SMS to default. (only available in GSM version).	
98	Reset user code. Reset all user code.	
99	Reset Panel. Reset all user code and programming setting except installer code.	

PGM Definition for DFA5300 V2 16 zones

PGM Definition Value	
Value	Description
000-015	Follow zone open. Enable 24hr without auto off feature. E.g. 000 (follow zone 1), 001 (follow zone 2) etc. Suitable for indoor lighting that need to be auto on all time and turn off manually. E.g. Office with low natural light, turn on light or air condition automatically when PIR detect movement in the morning and manually off after office hour.
016-031	Follow zone open. Enable 24hr with auto off feature (user programming address 41). Suitable for indoor lighting that need to be auto on all time and with energy saving. E.g. Store room light.
032-047	Follow zone open. Enable during night mode without auto off feature. Suitable for outdoor lighting that need to be auto on during night mode and turn off manually. E.g. Shop with strong natural light, turn on automatically when PIR detect movement during night time and manually off after business hour.
048-063	Follow zone. Enable during night mode with auto off feature (user programming address 41). Suitable to act as sensor light for indoor and outdoor. E.g. Car porch light, Living hall light etc.
064	Follow Timer1 (user programming address 37 & 38).
065	Follow Timer2 (user programming address 39 & 40).
066	Follow Timer1 and Timer2 (user programming address 37 to 40).
067	Follow Entry Exit time. Enable 24hr without auto off feature. E.g. Office with low natural light that can turn on upon main door open and turn off automatically after system arm.
068	Follow Entry Exit time. Enable 24hr with auto off feature. E.g. Staircase light for office that can turn on automatically upon main door open for entry illumination and turn off automatically for energy saving. After office hour, upon system arm will turn on automatically for exit illumination and auto off after exit timer expired.
069	Follow Entry Exit time. Enable during night mode without auto off feature. E.g. Living hall light with strong natural light that is only necessary during night mode, can turn on automatically during entry and stay on until user turn off manually. Upon system arm during night time, will turn on until exit timer expired.
070	Follow Entry Exit time. Enable during night mode with auto off feature. E.g. Car porch light that turn on during entry and exit and turn off automatically.
71-86	Follow zone trigger. E.g. Perimeter sensor (silent mode zone) trigger warning light or buzzer.
87-102	Follow zone trigger. Pulse signal. E.g. DVR channel switching.
103	Manual on/off only.
104	*Activate when fully arm. Cannot turn on/off manually.
105	*Activate when trouble condition exist. Cannot turn on/off manually.
106	*Activate when zones trigger, auto off some time after system disarm (user programming address 41). Cannot turn off manually while zone still trigger.
107	*Activate when zones trigger, off after disarm. Cannot turn on/off manually.

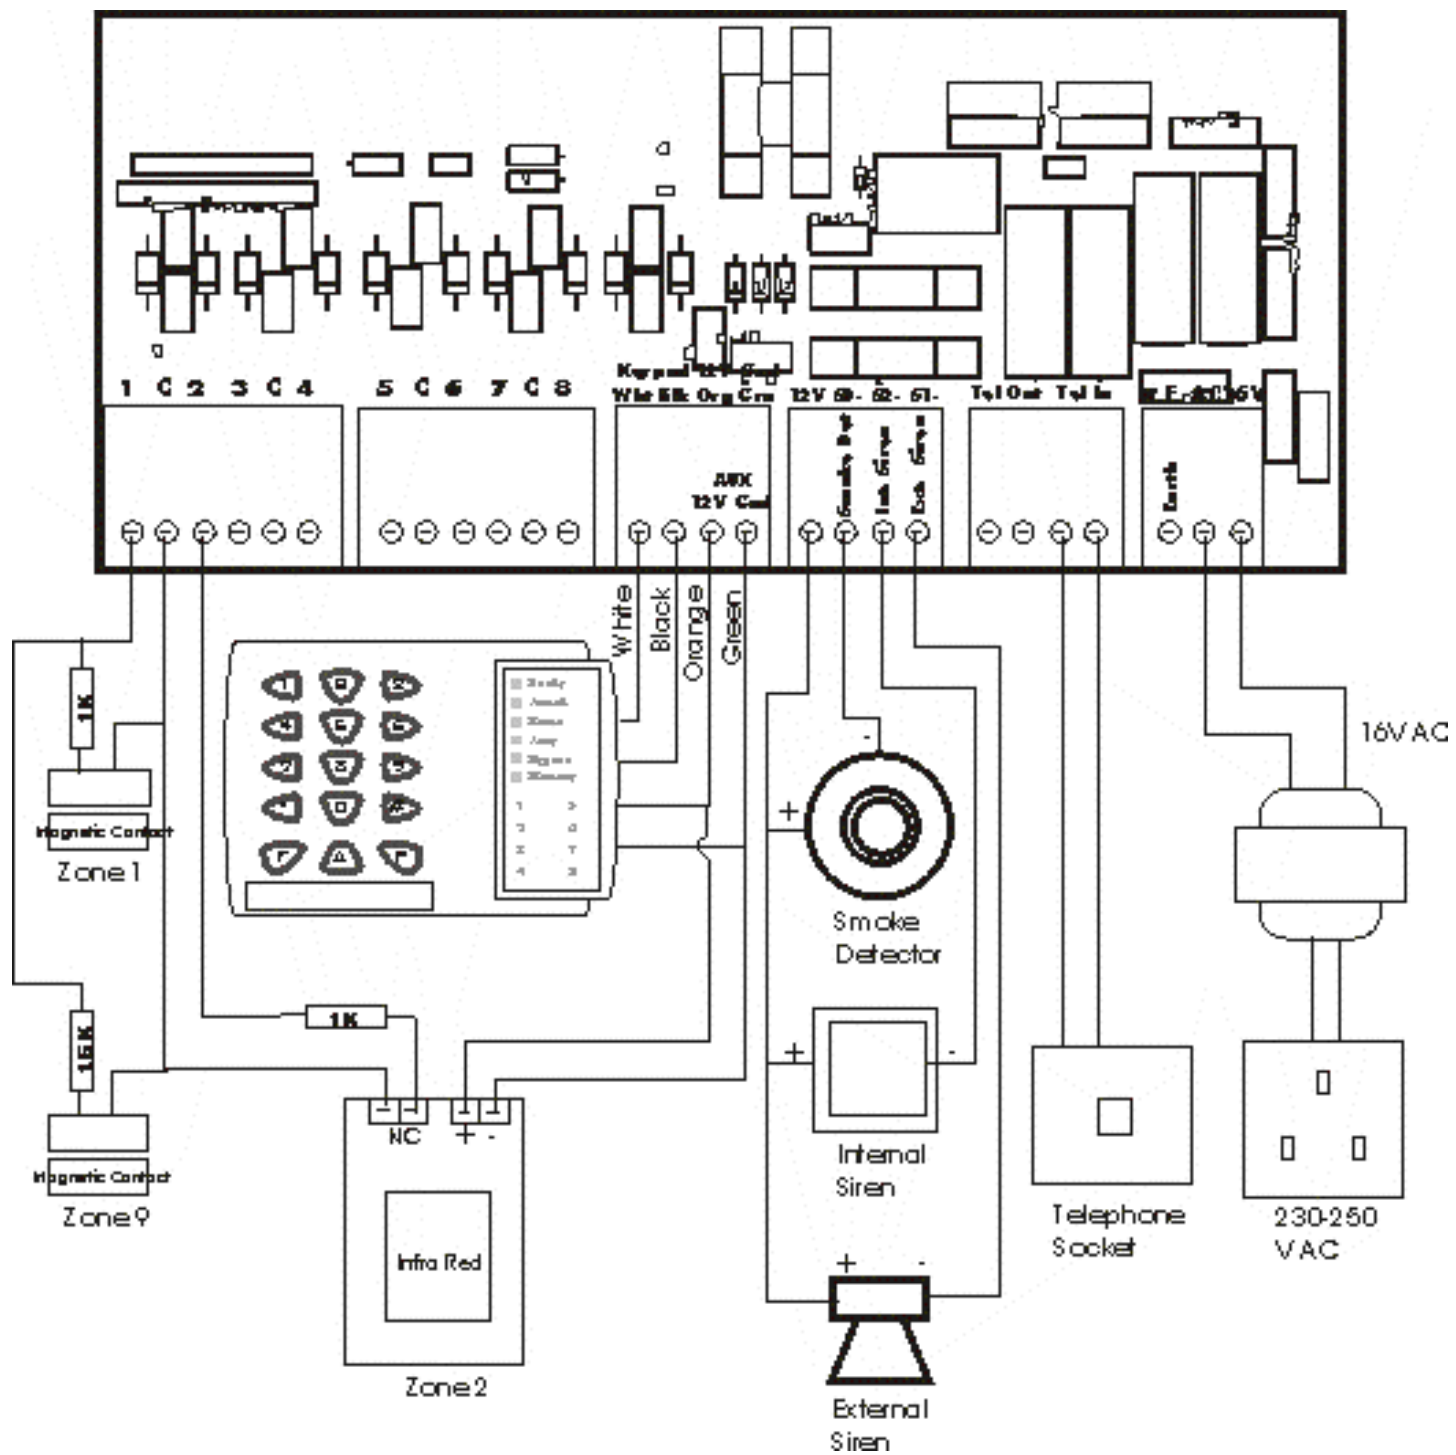

User Programming

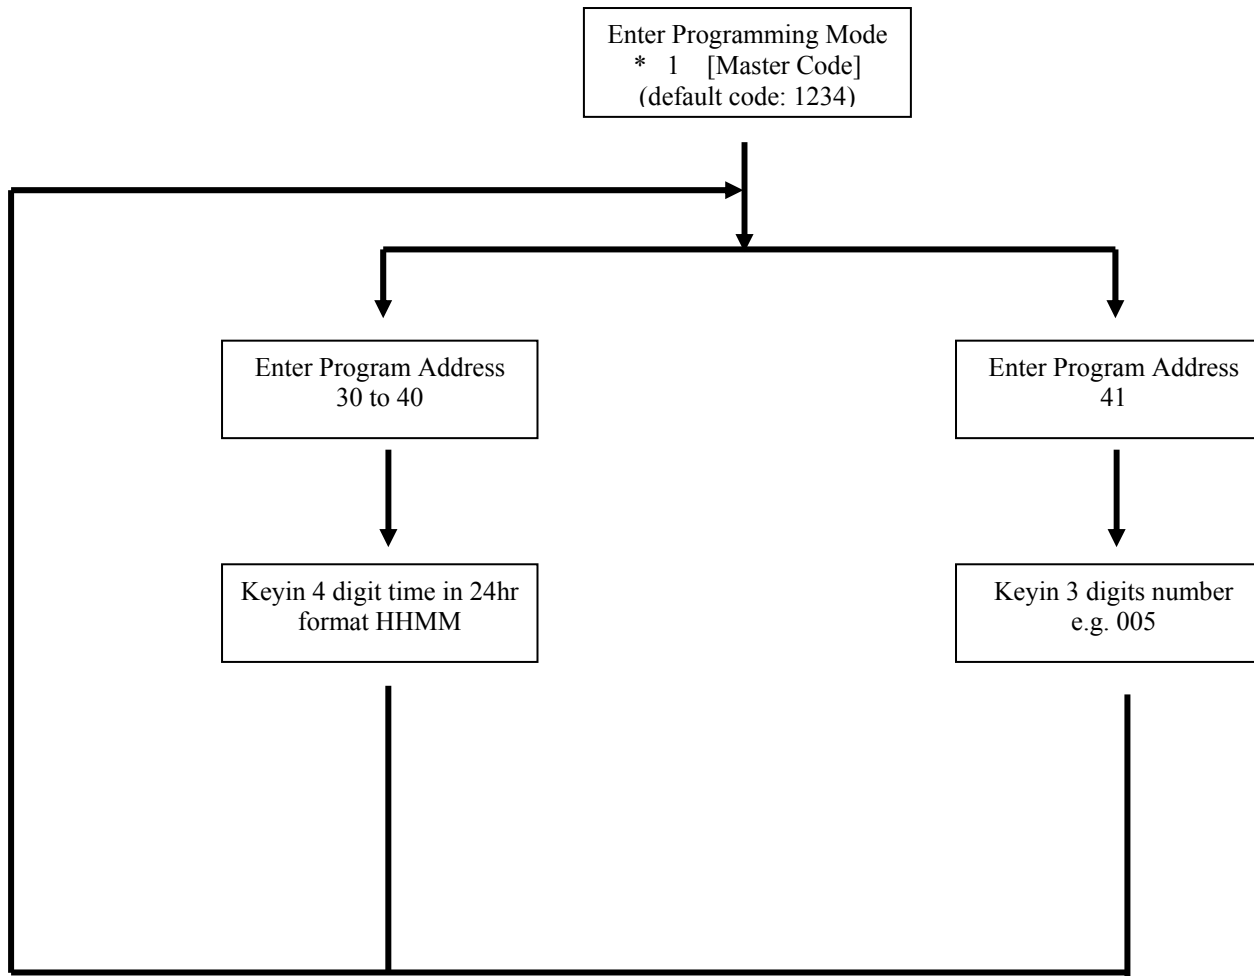

User Programming Address Summary DFA5300 V2 16 zones

User programming.		
Addr.	Description	Default Value
30	Current Time. 24hr format HHMM, e.g for 11:30pm, keyin 2330	-
31	Auto Arm Time for Partition 1. 24hr format HHMM, e.g for 11:30pm, keyin 2330. To disable this timer keyin 9999.	9999
32	Auto Disarm Time for Partition 1. 24hr format HHMM, e.g for 11:30pm, keyin 2330. To disable this timer keyin 9999.	9999
33	Auto Arm Time for Partition 2. 24hr format HHMM, e.g for 11:30pm, keyin 2330. To disable this timer keyin 9999.	9999
34	Auto Disarm Time for Partition 2. 24hr format HHMM, e.g for 11:30pm, keyin 2330. To disable this timer keyin 9999.	9999
35	Night mode begin time. 24hr format HHMM, e.g for 11:30pm, keyin 2330. To disable this timer keyin 9999.	9999
36	Night mode end time. 24hr format HHMM, e.g for 11:30pm, keyin 2330. To disable this timer keyin 9999.	9999
37	PGM On Time 1. 24hr format HHMM, e.g for 11:30pm, keyin 2330. To disable this timer keyin 9999.	9999
38	PGM Off Time 1. 24hr format HHMM, e.g for 11:30pm, keyin 2330. To disable this timer keyin 9999.	9999
39	PGM On Time 2. 24hr format HHMM, e.g for 11:30pm, keyin 2330. To disable this timer keyin 9999.	9999
40	PGM Off Time 2. 24hr format HHMM, e.g for 11:30pm, keyin 2330. To disable this timer keyin 9999.	9999
41	PGM Auto Off Timer. From 1 to 255 minute	005

